

RS Sport Steering Wheel

From 2006 m. y.

Notes:

Informations for

- ◆ Relay and fuse arrangements

- ◆ Connector arrangement

- ◆ Control units and relays

- ◆ Ground connections

⇒ Component Locations


Informations for

- ◆ Troubleshooting Procedures

⇒ Guided fault finding



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

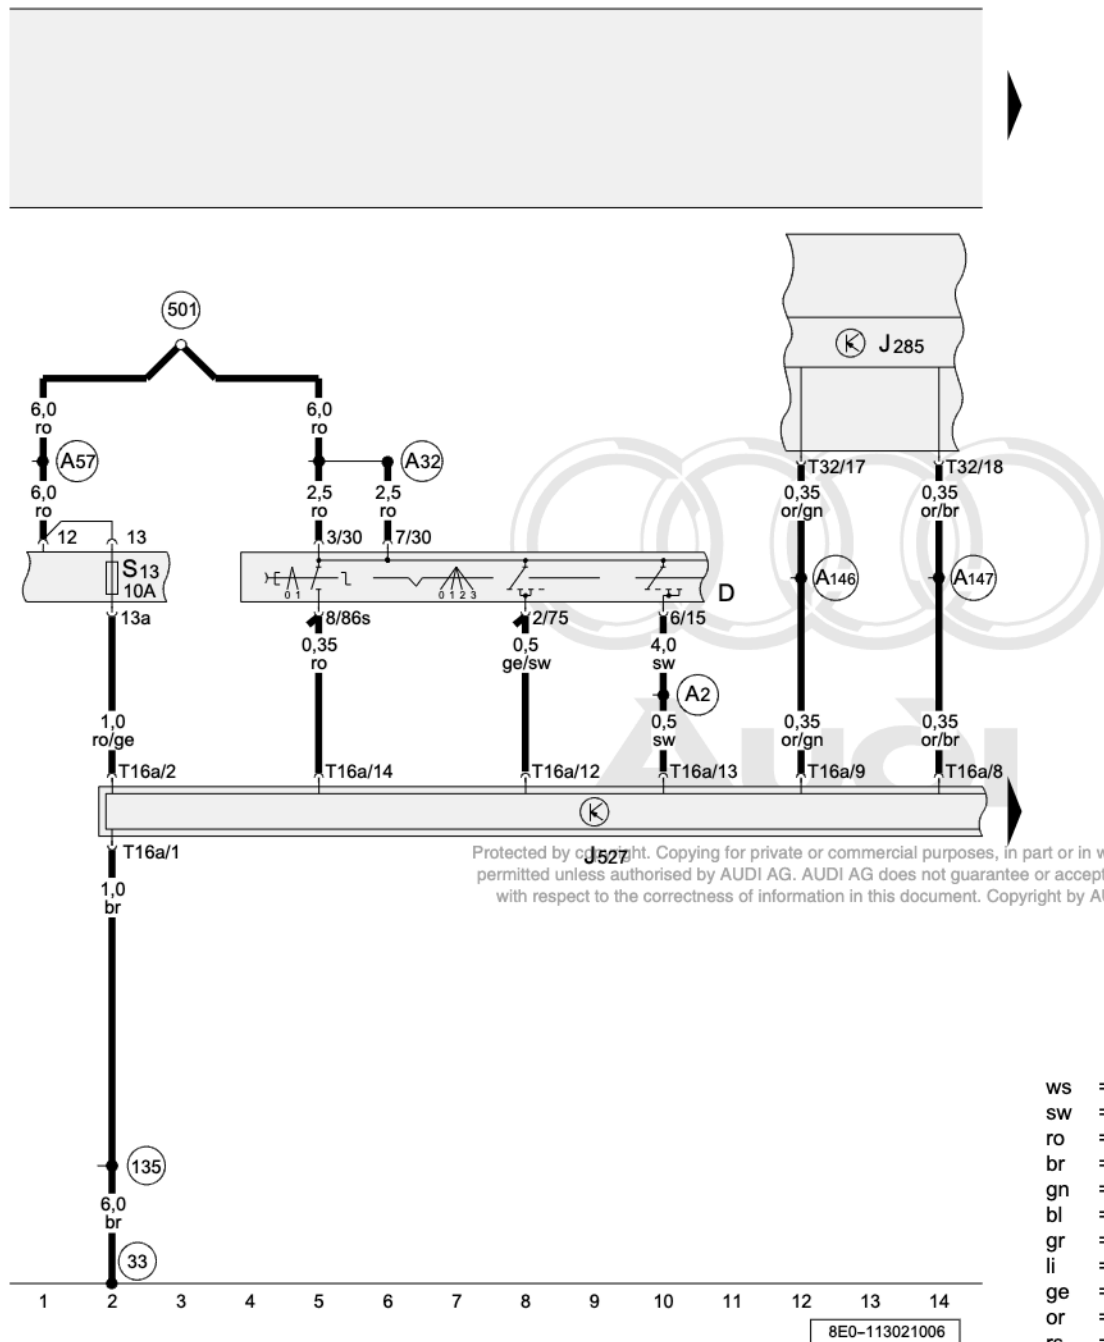


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Ignition/Starter Switch

- D Ignition/Starter Switch
- J285 Instrument Cluster Control Module
- J527 Steering Column Electronic Systems Control Module
- S13 Fuse (on fuse/relay panel)
- T16a 16-Pin Connector, black, on steering Column Electronic Systems Control Module
- T32 32-Pin Connector, blue, on instrument panel insert
- 33 Ground Connection (behind instrument panel, right)
- 135 Ground Connection 2 (in instrument panel wiring harness)
- 501 Threaded Connection 2 - terminal 30 (on relay panel)
- A2 Plus Connection (15) (in instrument panel wiring harness)
- A32 Plus Connection (30) (in instrument panel wiring harness)
- A57 Plus Connection 3 (30) (in instrument panel wiring harness)
- A146 Comfort System High-Bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-Bus Connection (in instrument panel wiring harness)

Sport Program Button, Left Multi-function Buttons on steering wheel, Right Multi-function Buttons on steering wheel

- E221 Control Module in Steering Wheel
- E440 Left Multi-function Buttons (on steering wheel)
- E441 Right Multi-function Buttons (on steering wheel)
- E541 Sport Program Button
- J453 Multi-function Steering Wheel Control Module
- J527 Steering Column Electronic Systems Control Module
- T6w 6-Pin Connector, white
- T6x 6-Pin Connector, white

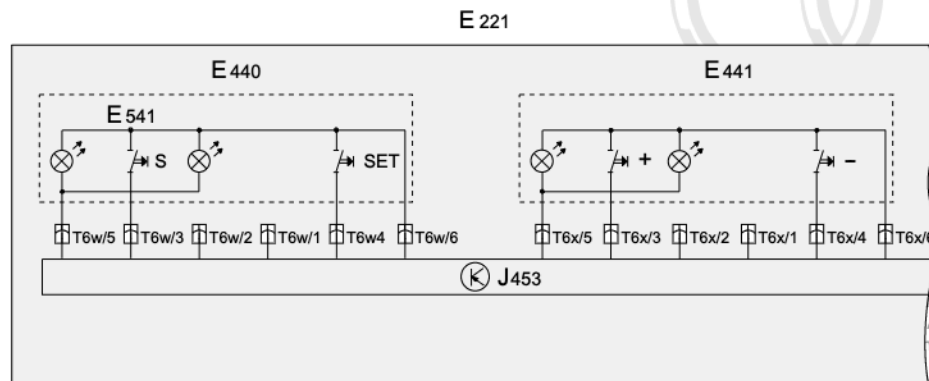

Private or commercial purposes, in part or in whole, is not permitted. AUDI AG does not guarantee or accept any liability for information in this document. Copyright by AUDI AG.



- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28

8E0-113031006



- | | |
|------|--|
| E221 | Control Module in Steering Wheel |
| F350 | Spiral Spring |
| H | Signal Horn Activation |
| J234 | Airbag Control Module |
| J453 | Multi-function Steering Wheel Control Module |
| J527 | Steering Column Electronic Systems Control Module |
| N95 | Driver's Airbag Igniter |
| N250 | Driver's Airbag Igniter 2 |
| T3m | 3-Pin Connector, white |
| T4e | 4-Pin Connector, yellow, connector station: module carrier in interior |
| T6v | 6-Pin Connector, white |

<fo:ext: Short circuit bridge becomes effective when connector is unplugged
nal-

```

graphic
src="../../../
PDOC/
samba/
tools/
png-
convert/
out/slp/
ft_icons/
kurzbr_l.
png"
content-
width="2
0pt"
scaling="
uniform"/
>

```

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

29	30	31	32	33	34	35	36	37	38	39	40	41	42
----	----	----	----	----	----	----	----	----	----	----	----	----	----

8E0-113041006